



APPENDIX A

DFO Operational Statements



ISOLATED OR DRY OPEN-CUT STREAM CROSSINGS

Fisheries and Oceans Canada
Ontario Operational Statement

Version 1.0

For the purpose of this Operational Statement, the term “Isolated Crossing” means a temporary stream crossing technique that allows work (e.g., trenched pipeline or cable installation) to be carried out “in-the-dry” while diverting the natural flow around the site during construction. These types of open trenched crossings are isolated using flume or dam and pump techniques (see *Pipeline Associated Watercrossings*, 2005 at http://www.capp.ca/default.asp?V_DOC_ID=763&PubID=96717).

The term “Dry Open-cut Stream Crossing” means a temporary stream crossing work (e.g., trenched pipeline or cable installation) that is carried out during a period when the entire stream width is seasonally dry or is frozen to the bottom.

The risks to fish and fish habitat associated with isolated open cut stream crossings include the potential for direct damage to substrates, release of excessive sediments, loss of riparian habitat, stranding of fish in dewatered areas, impingement/entrainment of fish at pump intakes, and disruption of essential fish movement patterns. Similarly, dry open-cut stream crossings pose a risk to fish and fish habitat due to potential harmful alteration of substrates, loss of riparian habitat, and release of excessive sediment once stream flows resume.

The order of preference for carrying out a cable or pipeline stream crossing, in order to protect fish and fish habitat, is: a) punch or bore crossing (see *Punch & Bore Crossings* Operational Statement); b) high-pressure directional drill crossing (see *High-Pressure Directional Drilling* Operational Statement); c) dry open-cut crossing; and d) isolated open-cut crossing. This order must be balanced with practical considerations at the site.

Fisheries and Oceans Canada (DFO) is responsible for protecting fish and fish habitat across Canada. Under the *Fisheries Act* no one may carry out a work or undertaking that will cause the harmful alteration, disruption or destruction (HADD) of fish habitat unless it has been authorized by DFO. By following the conditions and measures set out below you will be in compliance with subsection 35(1) of the *Fisheries Act*.

The purpose of this Operational Statement is to describe the conditions under which it is applicable to your project and the measures to incorporate into your project in order to avoid negative impacts to fish habitat. You may proceed with your isolated or dry open-cut stream crossing project without a DFO review when you meet the following conditions:

- if working within the Thames River, Sydenham River, Ausable River, Grand River, or Maitland River, you have contacted your Conservation Authority or local DFO Office (see Ontario

DFO office list) to ensure that your project will not impact Schedule I mussel species at risk under the federal *Species at Risk Act* (SARA), before proceeding,

- for dry, open-cut crossings the watercourse is dry or frozen completely to the bottom at the site,
- for isolated crossings, the channel width of the watercourse at the crossing site is less than 5 meters from ordinary high water mark to ordinary high water mark (HWM) (see definition below),
- the isolated crossing does not involve the construction or use of an off-stream diversion channel, or the use of earthen dams,
- the isolated crossing ensures that all natural upstream flows are conveyed downstream during construction, with no change in quality or quantity,
- the site does not occur at a stream location involving known fish spawning habitat, particularly if it is dependent on groundwater upwelling,
- the use of explosives is not required to complete the crossing, and
- you incorporate the *Measures to Protect Fish and Fish Habitat when Carrying Out an Isolated or Dry Open-cut Stream Crossing* listed below.

If you cannot meet all of the conditions listed above and cannot incorporate all of the measures listed below then your project may result in a violation of subsection 35(1) of the *Fisheries Act* and you could be subject to enforcement action. In this case, you should contact your Conservation Authority, or the DFO office in your area (see Ontario DFO office list) or Parks Canada if the project is located within its jurisdiction, including the Trent-Severn Waterway and the Rideau Canal, if you wish to obtain an opinion on the possible options you should consider to avoid contravention of the *Fisheries Act*.

You are required to respect all municipal, provincial and federal legislation that applies to the work being carried out in relation to this Operational Statement. The activities undertaken in this Operational Statement must also comply with SARA (www.sararegistry.gc.ca). If you have questions regarding this Operational Statement, please contact one of the agencies listed above.

We ask that you notify DFO, preferably 10 working days before starting your work, by filling out and sending the Ontario Operational Statement notification form (www.dfo-mpo.gc.ca/regions/central/habitat/os-ao/prov-terr/index_e.htm) to the DFO office in your area. This information is requested in order to evaluate the effectiveness of the work carried out in relation to this Operational Statement.

Measures to Protect Fish and Fish Habitat when Carrying Out an Isolated or Dry Open-Cut Stream Crossing

1. Use existing trails, roads or cut lines wherever possible, as access routes to avoid disturbance to the riparian vegetation.
2. Locate crossings at straight sections of the stream, perpendicular to the banks, whenever possible. Avoid crossing on meander bends, braided streams, alluvial fans, active floodplains or any other area that is inherently unstable and may result in the erosion and scouring of the stream bed.
3. Complete the crossing in a manner that minimizes the duration of instream work.
4. Construction should be avoided during unusually wet, rainy or winter thaw conditions.
5. While this Operational Statement does not cover the clearing of riparian vegetation, the removal of select plants may be necessary to access the construction site. This removal should be kept to a minimum and within the utility right-of-way.
6. Machinery fording a flowing watercourse to bring equipment required for construction to the opposite side is limited to a one-time event (over and back) and is to occur only if an existing crossing at another location is not available or practical to use. Operational Statements are also available for *Ice Bridges and Snow Fills*, *Clear-Span Bridges*, and *Temporary Stream Crossing*.
 - 6.1. If minor rutting is likely to occur, stream bank and bed protection methods (e.g., swamp mats, pads) should be used provided they do not constrict flows or block fish passage.
 - 6.2. Grading of the stream banks for the approaches should not occur.
 - 6.3. If the stream bed and banks are steep and highly erodible (e.g., dominated by organic materials and silts) and erosion and degradation is likely to occur as a result of equipment fording, then a temporary crossing structure or other practice should be used to protect these areas.
 - 6.4. Time the one-time fording to prevent disruption to sensitive fish life stages by adhering to appropriate fisheries timing windows (see the *Ontario In-Water Construction Timing Windows*).
 - 6.5. Fording should occur under low flow conditions and not when flows are elevated due to local rain events or seasonal flooding.
7. Operate machinery in a manner that minimizes disturbance to the watercourse bed and banks.
 - 7.1. Protect entrances at machinery access points (e.g., using swamp mats) and establish single site entry and exit.
 - 7.2. Machinery is to arrive on site in a clean condition and is to be maintained free of fluid leaks.

- 7.3. Wash, refuel and service machinery and store fuel and other materials for the machinery away from the water to prevent deleterious substances from entering the water.
- 7.4. Keep an emergency spill kit on site in case of fluid leaks or spills from machinery.
8. Install effective sediment and erosion control measures before starting work to prevent entry of sediment into the watercourse. Inspect them regularly during the course of construction and make all necessary repairs if any damage occurs.
9. Stabilize any waste materials removed from the work site, above the HWM, to prevent them from entering the watercourse. This could include covering spoil piles with biodegradable mats or tarps or planting them with grass or shrubs.
10. Vegetate any disturbed areas by planting and seeding preferably with native trees, shrubs or grasses and cover such areas with mulch to prevent soil erosion and to help seeds germinate. If there is insufficient time remaining in the growing season, the site should be stabilized (e.g., cover exposed areas with erosion control blankets to keep the soil in place and prevent erosion) and vegetated the following spring.
 - 10.1. Maintain effective sediment and erosion control measures until re-vegetation of disturbed areas is achieved.

Measures to Protect Fish and Fish Habitat when Carrying Out an Isolated Crossing

Temporary isolation is used to allow work “in-the-dry” while maintaining the natural downstream flow by installing dams up and downstream of the site and conveying all of the natural upstream flow into a flume, or pumping it around the isolated area. In addition to measures 1 to 10, the following measures should be carried out when conducting an isolated stream crossing:

11. Time isolated crossings to protect sensitive fish life stages by adhering to fisheries timing windows (see Measure 6.4).
12. Use dams made of non-earthen material, such as water-inflated portable dams, pea gravel bags, concrete blocks, steel or wood wall, clean rock, sheet pile or other appropriate designs, to separate the dewatered work site from flowing water.
 - 12.1. If granular material is used to build dams, use clean or washed material that is adequately sized (i.e., moderately sized rock and not sand or gravel) to withstand anticipated flows during the construction. If necessary, line the outside face of dams with heavy poly-plastic to make them impermeable to water. Material to build these dams should not be taken from below the HWM of any water body.
 - 12.2. Design dams to accommodate any expected high flows of the watercourse during the construction period.

13. Before dewatering, rescue any fish from within the isolated area and return them safely immediately downstream of the worksite.

13.1. You will require a permit from DFO to relocate any aquatic species that are listed as either endangered or threatened under SARA. Please contact your Conservation Authority or the DFO office in your area to determine if an aquatic species at risk is in the vicinity of your project and, if appropriate, use the DFO website at www.dfo-mpo.gc.ca/species-especies/permits/sarapermits_e.asp to apply for a permit.

14. Pump sediment laden dewatering discharge into a vegetated area or settling basin, and prevent sediment and other deleterious substances from entering any water body.

15. Remove accumulated sediment and excess spoil from the isolated area before removing dams.

16. Stabilize the **streambed** and restore the original channel shape, bottom gradient and substrate to pre-construction condition before removing dams.

17. Ensure **banks** are stabilized, restored to original shape, adequately protected from erosion and re-vegetated, preferably with native species.

18. If rock is used to stabilize banks, it should be clean, free of fine materials, and of sufficient size to resist displacement during peak flood events. The rock should be placed at the original stream bank grade to ensure there is no infilling or narrowing of the watercourse.

19. Gradually remove the downstream dam first, to equalize water levels inside and outside of the isolated area and to allow suspended sediments to settle.

20. During the final removal of dams, restore the original channel shape, bottom gradient and substrate at these locations.

21. Pumped Diversion

Pumped diversions are used to divert water around the isolated area to maintain natural downstream flows and prevent upstream ponding.

21.1. Ensure intakes are operated in a manner that prevents streambed disturbance and fish mortality. Guidelines to determine the appropriate mesh size for intake screens may be obtained from DFO (e.g., *Freshwater Intake End-of-Pipe Fish Screen Guideline* (1995), available at www.dfo-mpo.gc.ca/Library/223669.pdf).

21.2. Ensure the pumping system is sized to accommodate any expected high flows of the watercourse during the construction period. Pumps should be monitored at all times, and back-up pumps should be readily available on-site in case of pump failure.

21.3. Protect pump discharge area(s) to prevent erosion and the release of suspended sediments downstream, and remove this material when the works have been completed.

Measures to Protect Fish and Fish Habitat when Carrying Out a Dry Open-Cut Stream Crossing

In addition to measures 1 to 10, the following measures should be carried out when conducting a dry open-cut stream crossing:



22. Stabilize the **streambed** and restore the original channel shape, bottom gradient and substrate to pre-construction condition.

23. Ensure **banks** are stabilized, restored to original shape, adequately protected from erosion and re-vegetated, preferably with native species.

Definition:

Ordinary high water mark (HWM) - The usual or average level to which a body of water rises at its highest point and remains for sufficient time so as to change the characteristics of the land. In flowing waters (rivers, streams) this refers to the "active channel/bank-full level" which is often the 1:2 year flood flow return level. In inland lakes, wetlands or marine environments it refers to those parts of the water body bed and banks that are frequently flooded by water so as to leave a mark on the land and where the natural vegetation changes from predominately aquatic vegetation to terrestrial vegetation (excepting water tolerant species). For reservoirs this refers to normal high operating levels (Full Supply Level).

For the Great Lakes this refers to the 80th percentile elevation above chart datum as described in DFO's Fish Habitat and Determining the High Water Mark on Lakes.

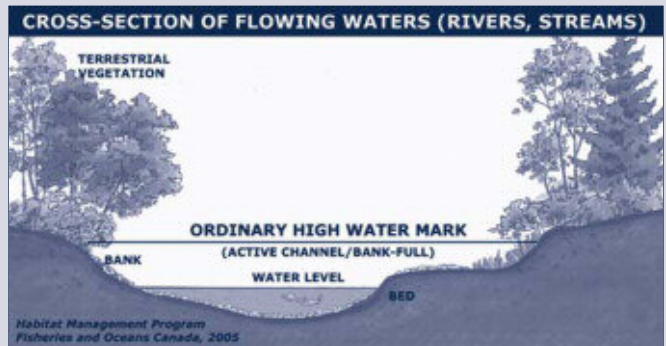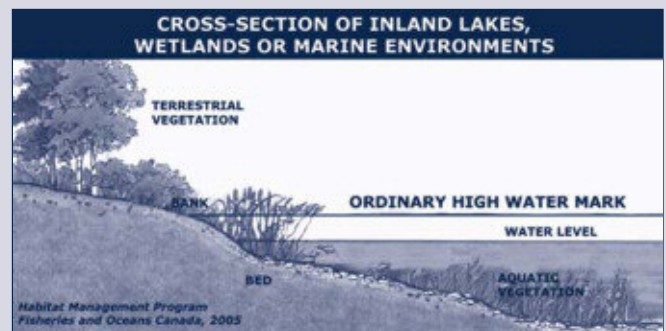

FISHERIES AND OCEANS CANADA OFFICES IN ONTARIO

Southern Ontario District

Burlington

Fisheries and Oceans Canada
3027 Harvester Road, Suite 304
P.O. Box 85060
Burlington, ON L7R 4K3
Telephone: (905) 639-0188
Fax: (905) 639-3549
Email: ReferralsBurlington@DFO-MPO.GC.CA

London

Fisheries and Oceans Canada
73 Meg Drive
London, ON N6E 2V2
Telephone: (519) 668-2722
Fax: (519) 668-1772
Email: ReferralsLondon@DFO-MPO.GC.CA

Eastern Ontario District

Peterborough

Fisheries and Oceans Canada
501 Towerhill Road, Unit 102
Peterborough, ON K9H 7S3
Telephone: (705) 750-0269
Fax: (705) 750-4016
Email: ReferralsPeterborough@DFO-MPO.GC.CA

Prescott

Fisheries and Oceans Canada
401 King Street West
Prescott, ON K0E 1T0
Telephone: (613) 925-2865
Fax: (613) 925-2245
Email: ReferralsPrescott@DFO-MPO.GC.CA

Northern Ontario District

Parry Sound

Fisheries and Oceans Canada
28 Waubeek Street
Parry Sound, ON P2A 1B9
Telephone: (705) 746-2196
Fax: (705) 746-4820
Email: ReferralsParrySound@DFO-MPO.GC.CA

Sudbury and Sault Ste. Marie

Fisheries and Oceans Canada
1500 Paris Street, Unit 11
Sudbury, ON P3E 3B8
Telephone: (705) 522-2816
Fax: (705) 522-6421
Email: ReferralsSudbury@DFO-MPO.GC.CA

Thunder Bay and Kenora

Fisheries and Oceans Canada
Thunder Bay Office
100 Main Street, Suite 425
Thunder Bay, ON P7B 6R9
Telephone: (807) 346-8118
Fax: (807) 346-8545
Email: ReferralsThunderBay@DFO-MPO.GC.CA

Aussi disponible en français

http://www.dfo-mpo.gc.ca/oceans-habitat/habitat/modernizing-moderniser/epmp-pmpe/index_f.asp



OVERHEAD LINE CONSTRUCTION

Fisheries and Oceans Canada
Ontario Operational Statement

Version 3.0

Overhead lines are constructed for electrical or telecommunication transmission across many watercourses that range in size from small streams and ponds to large rivers, lakes and reservoirs. This Operational Statement applies to selective removal of vegetation along the right-of-way to provide for installation and safe operation of overhead lines, and passage of equipment and materials across the water body.

Although fish habitat occurs throughout a water system, it is the riparian habitat that is most sensitive to overhead line construction. Riparian vegetation occurs adjacent to the watercourse and directly contributes to fish habitat by providing shade, cover, and spawning and food production areas. It is important to design and build your overhead line project to meet your needs while also protecting riparian areas. Potential impacts to fish and fish habitat include excessive loss of riparian vegetation, erosion and sedimentation resulting from bank disturbance and loss of plant root systems, rutting and compaction of stream substrate at crossing sites, and disruption of sensitive fish life stages.

Fisheries and Oceans Canada (DFO) is responsible for protecting fish and fish habitat across Canada. Under the *Fisheries Act* no one may carry out a work or undertaking that will cause the harmful alteration, disruption or destruction (HADD) of fish habitat unless it has been authorized by DFO. By following the conditions and measures set out below you will be in compliance with subsection 35(1) of the *Fisheries Act*.

The purpose of this Operational Statement is to describe the conditions under which it is applicable to your project and the measures to incorporate into your project in order to avoid negative impacts to fish habitat. You may proceed with your overhead line project without a DFO review when you meet the following conditions:

- it does not require the construction or placement of any temporary or permanent structures (e.g. islands, poles, crib works, etc.) below the ordinary high water mark (HWM) (see definition below), and
- you incorporate the *Measures to Protect Fish and Fish Habitat when Constructing Overhead Lines* listed below in this Operational Statement.

If you cannot meet all of the conditions listed above and cannot incorporate all of the measures listed below then your project may result in a violation of subsection 35(1) of the *Fisheries Act* and you could be subject to enforcement action. In this case,

you should contact your Conservation Authority, or the DFO office in your area (see Ontario DFO office list) or Parks Canada if the project is located within its jurisdiction, including the Trent-Severn Waterway and the Rideau Canal, if you wish to obtain an opinion on the possible options you should consider to avoid contravention of the *Fisheries Act*.

You are required to respect all municipal, provincial or federal legislation that applies to the work being carried out in relation to this Operational Statement. The activities undertaken in this Operational Statement must also comply with the *Species at Risk Act* (www.sararegistry.gc.ca). If you have questions regarding this Operational Statement, please contact one of the agencies listed above.

We ask that you notify DFO, preferably 10 working days before starting your work by filling out and sending the Ontario Operational Statement notification form (www.dfo-mpo.gc.ca/regions/central/habitat/os-ao/prov-terr/index_e.htm) to the DFO office in your area. This information is requested in order to evaluate the effectiveness of the work carried out in relation to this Operational Statement.

Measures to Protect Fish and Fish Habitat when Constructing Overhead Lines

1. Installing overhead lines under frozen conditions is preferable in all situations. On wet terrains (e.g., bogs), lines should be installed under frozen conditions, where possible, or using aerial methods (i.e., helicopter).
2. Design and construct approaches so that they are perpendicular to the watercourse wherever possible to minimize loss or disturbance to riparian vegetation.
3. Avoid building structures on meander bends, braided streams, alluvial fans, active floodplains or any other area that is inherently unstable and may result in erosion and scouring of the stream bed or overhead line structures.
 - 3.1. Wherever possible, locate all temporary or permanent structures, such as poles, sufficiently above the HWM to prevent erosion.
4. While this Operational Statement does not cover the clearing of riparian vegetation, the removal of select plants may be necessary to accommodate the overhead line. This removal

should be kept to a minimum and within the road or utility right-of-way.

5. Machinery fording the watercourse to bring equipment required for construction to the opposite side is limited to a one-time event (over and back) and should occur only if an existing crossing at another location is not available or practical to use. A *Temporary Stream Crossing Operational Statement* is also available.

5.1. If minor rutting is likely to occur, stream bank and bed protection methods (e.g., swamp mats, pads) should be used provided they do not constrict flows or block fish passage.

5.2. Grading of the stream banks for the approaches should not occur.

5.3. If the stream bed and banks are steep and highly erodible (e.g., dominated by organic materials and silts) and erosion and degradation is likely to occur as a result of equipment fording, then a temporary crossing structure or other practice should be used to protect these areas.

5.4. Time the one-time fording to prevent disruption to sensitive fish life stages by adhering to appropriate fisheries timing windows (see the *Ontario In-Water Construction Timing Windows*).

5.5. Fording should occur under low flow conditions and not when flows are elevated due to local rain events or seasonal flooding.

6. Operate machinery on land and in a manner that minimizes disturbance to the banks of the watercourse.

6.1. Machinery is to arrive on site in a clean condition and is to be maintained free of fluid leaks.

6.2. Wash, refuel and service machinery and store fuel and other materials for the machinery away from the water to prevent any deleterious substance from entering the water.

6.3. Keep an emergency spill kit on site in case of fluid leaks or spills from machinery.

6.4. Restore banks to original condition if any disturbance occurs.

7. Install effective sediment and erosion control measures before starting work to prevent entry of sediment into the watercourse. Inspect them regularly during the course of construction and make all necessary repairs if any damage occurs.

7.1. Avoid work during wet, rainy conditions or use alternative techniques such as aerial methods (i.e., helicopter) to install overhead lines.

8. Stabilize any waste materials removed from the work site to prevent them from entering the watercourse. This could include covering spoil piles with biodegradable mats or tarps or planting them with grass or shrubs.

9. Vegetate any disturbed areas by planting and seeding preferably with native trees, shrubs or grasses and cover such areas with mulch to prevent erosion and to help seeds germinate. If there is insufficient time remaining in the growing season, the site should be stabilized (e.g.,



cover exposed areas with erosion control blankets to keep the soil in place and prevent erosion) and vegetated the following spring.

9.1. Maintain effective sediment and erosion control measures until re-vegetation of disturbed areas is achieved.

Definition:

Ordinary high water mark (HWM) – The usual or average level to which a body of water rises at its highest point and remains for sufficient time so as to change the characteristics of the land. In flowing waters (rivers, streams) this refers to the “active channel/bank-full level” which is often the 1:2 year flood flow return level. In inland lakes, wetlands or marine environments it refers to those parts of the water body bed and banks that are frequently flooded by water so as to leave a mark on the land and where the natural vegetation changes from predominately aquatic vegetation to terrestrial vegetation (excepting water tolerant species). For reservoirs this refers to normal high operating levels (Full Supply Level).

For the Great Lakes this refers to the 80th percentile elevation above chart datum as described in DFO’s *Fish Habitat and Determining the High Water Mark on Lakes*.

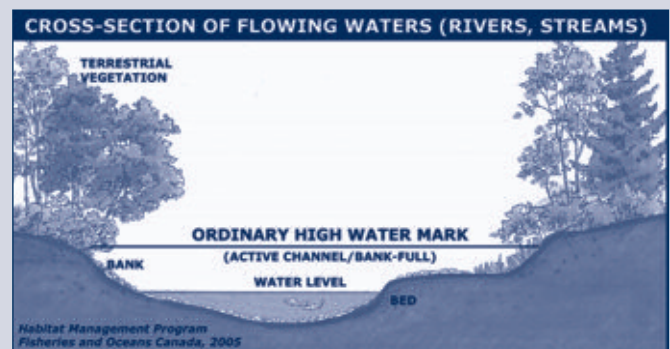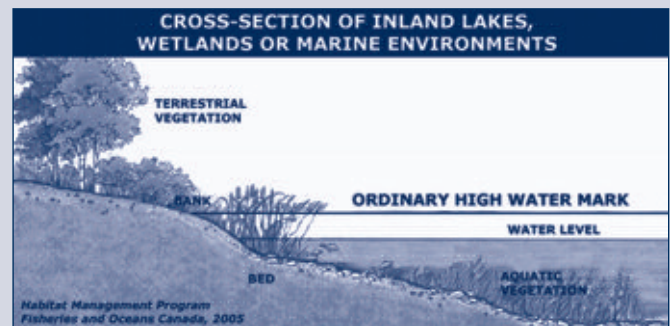

FISHERIES AND OCEANS CANADA OFFICES IN ONTARIO

Southern Ontario District

Burlington

Fisheries and Oceans Canada
3027 Harvester Road, Suite 304
P.O. Box 85060
Burlington, ON L7R 4K3
Telephone: (905) 639-0188
Fax: (905) 639-3549
Email: ReferralsBurlington@DFO-MPO.GC.CA

London

Fisheries and Oceans Canada
73 Meg Drive
London, ON N6E 2V2
Telephone: (519) 668-2722
Fax: (519) 668-1772
Email: ReferralsLondon@DFO-MPO.GC.CA

Eastern Ontario District

Peterborough

Fisheries and Oceans Canada
501 Towerhill Road, Unit 102
Peterborough, ON K9H 7S3
Telephone: (705) 750-0269
Fax: (705) 750-4016
Email: ReferralsPeterborough@DFO-MPO.GC.CA

Prescott

Fisheries and Oceans Canada
401 King Street West
Prescott, ON K0E 1T0
Telephone: (613) 925-2865
Fax: (613) 925-2245
Email: ReferralsPrescott@DFO-MPO.GC.CA

Northern Ontario District

Parry Sound

Fisheries and Oceans Canada
28 Waubeek Street
Parry Sound, ON P2A 1B9
Telephone: (705) 746-2196
Fax: (705) 746-4820
Email: ReferralsParrySound@DFO-MPO.GC.CA

Sudbury and Sault Ste. Marie

Fisheries and Oceans Canada
1500 Paris Street, Unit 11
Sudbury, ON P3E 3B8
Telephone: (705) 522-2816
Fax: (705) 522-6421
Email: ReferralsSudbury@DFO-MPO.GC.CA

Thunder Bay and Kenora

Fisheries and Oceans Canada
Thunder Bay Office
100 Main Street, Suite 425
Thunder Bay, ON P7B 6R9
Telephone: (807) 346-8118
Fax: (807) 346-8545
Email: ReferralsThunderBay@DFO-MPO.GC.CA

Aussi disponible en français

http://www.dfo-mpo.gc.ca/oceans-habitat/habitat/modernizing-moderniser/epmp-pmpe/index_f.asp



HIGH-PRESSURE DIRECTIONAL DRILLING

Fisheries and Oceans Canada
Ontario Operational Statement

Version 3.0

For the purpose of this Operational Statement, the term High-Pressure Directional Drilling (HPDD) means trenchless methods of crossing a watercourse using pressurized mud systems. HPDD is used to install cables and pipelines for gas, telecommunications, fibre optics, power, sewer, oil and water lines underneath watercourses and roads. This method is preferable to open-cut and isolated crossings since the cable or pipeline is drilled underneath the watercourse with very little disturbance to the bed or banks. HPDD involves drilling a pilot bore hole underneath the watercourse towards a surface target, back-reaming the bore hole to the drill rig while pulling the pipe along through the hole. This process typically uses the freshwater gel mud system composed of a mixture of clean, freshwater as the base, bentonite (clay-based drilling lubricant) as the viscosifier and synthetic polymers.

The general order of preference for carrying out a cable or pipeline stream crossing in order to protect fish and fish habitat is: a) a punch or bore crossing (see *Punch & Bore Crossings Operational Statement*), b) HPDD crossing, c) dry open-cut crossing, and d) isolated open-cut crossing (see *Isolated or Dry Open-cut Stream Crossings Operational Statement*). This order must be balanced with practical considerations at the site.

One of the risks associated with HPDD is the escape of drilling mud into the environment as a result of a spill, tunnel collapse or the rupture of mud to the surface, commonly known as “frac-out”. A frac-out is caused when excessive drilling pressure results in drilling mud propagating toward the surface. The risk of a frac-out can be reduced through proper geotechnical assessment practices and drill planning and execution. The extent of a frac-out can be limited by careful monitoring and having appropriate equipment and response plans ready in the event that one occurs. HPDD can also result in excessive disturbance of riparian vegetation and sedimentation and erosion due to operation of equipment on the shoreline or fording to access the opposite bank.

Fisheries and Oceans Canada (DFO) is responsible for protecting fish and fish habitat across Canada. Under the *Fisheries Act* no one may carry out a work or undertaking that will cause the harmful alteration, disruption or destruction (HADD) of fish habitat unless it has been authorized by DFO. By following the conditions and measures set out below you will be in compliance with subsection 35(1) of the *Fisheries Act*.

The purpose of this Operational Statement is to describe the conditions under which it is applicable to your project and the measures to incorporate into your project in order to avoid negative impacts to fish habitat. You may proceed with your

high-pressure directional drill project without a DFO review when you meet the following conditions:

- the crossing technique will not damage the stream bed and thereby negatively impact fish or fish habitat,
- the crossing is not a wet open-cut crossing,
- you have an emergency frac-out response plan and a contingency crossing plan in place that outline the protocol to monitor, contain and clean-up a potential frac-out and an alternative method for carrying out the crossing, and
- you incorporate the *Measures to Protect Fish and Fish Habitat when High-Pressure Directional Drilling* listed below in this Operational Statement.

If you cannot meet all of the conditions listed above and cannot incorporate all of the measures listed below then your project may result in a violation of subsection 35(1) of the *Fisheries Act* and you could be subject to enforcement action. In this case, you should contact your Conservation Authority, or the DFO office in your area (see Ontario DFO office list) or Parks Canada if the project is located within its jurisdiction, including the Trent-Severn Waterway and the Rideau Canal, if you wish to obtain an opinion on the possible options you should consider to avoid contravention of the *Fisheries Act*.

You are required to respect all municipal, provincial or federal legislation that applies to the work being carried out in relation to this Operational Statement. The activities undertaken in this Operational Statement must also comply with the *Species at Risk Act* (www.sararegistry.gc.ca). If you have questions regarding this Operational Statement, please contact one of the agencies listed above.

We ask that you notify DFO, preferably 10 working days before starting your work by filling out and sending the Ontario Operational Statement notification form (www.dfo-mpo.gc.ca/regions/central/habitat/os-ao/prov-terr/index_e.htm) to the DFO office in your area. This information is requested in order to evaluate the effectiveness of the work carried out in relation to this Operational Statement.

Measures to Protect Fish and Fish Habitat when High-Pressure Directional Drilling

1. Use existing trails, roads or cut lines wherever possible, as access routes to avoid disturbance to the riparian vegetation.
2. Design the drill path to an appropriate depth below the watercourse to minimize the risk of frac-out and to a depth

to prevent the line from becoming exposed due to natural scouring of the stream bed. The drill entry and exit points are far enough from the banks of the watercourse to have minimal impact on these areas.

3. While this Operational Statement does not cover the clearing of riparian vegetation, the removal of select plants may be necessary to access the construction site. This removal should be kept to a minimum and within the road or utility right-of-way.
4. Machinery fording the watercourse to bring equipment required for construction to the opposite side is limited to a one-time event (over and back) and should occur only if an existing crossing at another location is not available or practical to use. A *Temporary Stream Crossing* Operational Statement is also available.
 - 4.1. If minor rutting is likely to occur, stream bank and bed protection methods (e.g., swamp mats, pads) should be used provided they do not constrict flows or block fish passage.
 - 4.2. Grading of the stream banks for the approaches should not occur.
 - 4.3. If the stream bed and banks are steep and highly erodible (e.g., dominated by organic materials and silts) and erosion and degradation are likely to occur as a result of equipment fording, then a temporary crossing structure or other practice should be used to protect these areas.
 - 4.4. Time the one-time fording to prevent disruption to sensitive fish life stages by adhering to appropriate fisheries timing windows (see the *Ontario In-Water Construction Timing Windows*).
 - 4.5. Fording should occur under low flow conditions and not when flows are elevated due to local rain events or seasonal flooding.
5. Operate machinery on land above the ordinary high water mark (see definition below) and in a manner that minimizes disturbance to the banks of the watercourse.
 - 5.1. Machinery is to arrive on site in a clean condition and is to be maintained free of fluid leaks.
 - 5.2. Wash, refuel and service machinery and store fuel and other materials for the machinery away from the water to prevent any deleterious substance from entering the water.
 - 5.3. Keep an emergency spill kit on site in case of fluid leaks or spills from machinery.
 - 5.4. Restore banks to original condition if any disturbance occurs.
6. Construct a dugout/settling basin at the drilling exit site to contain drilling mud to prevent sediment and other deleterious substances from entering the watercourse. If this cannot be achieved, use silt fences or other effective sediment and erosion control measures to prevent drilling mud from entering the watercourse. Inspect these measures regularly during the course of construction and make all necessary repairs if any damage occurs.
 - 6.1. Dispose of excess drilling mud, cuttings and other waste materials at an adequately sized disposal

facility located away from the water to prevent it from entering the watercourse.

7. Monitor the watercourse to observe signs of surface migration (frac-out) of drilling mud during all phases of construction.

Emergency Frac-out Response and Contingency Planning



8. Keep all material and equipment needed to contain and clean up drilling mud releases on site and readily accessible in the event of a frac-out.
9. Implement the frac-out response plan that includes measures to stop work, contain the drilling mud and prevent its further migration into the watercourse and notify all applicable authorities, including the closest DFO office in the area (see Ontario DFO office list). Prioritize clean up activities relative to the risk of potential harm and dispose of the drilling mud in a manner that prevents re-entry into the watercourse.
10. Ensure clean up measures do not result in greater damage to the banks and watercourse than from leaving the drilling mud in place.
11. Implement the contingency crossing plan including measures to either re-drill at a more appropriate location or to isolate the watercourse to complete the crossing at the current location. See *Isolated or Dry Open-cut Stream Crossings* Operational Statement for carrying out an isolated trenched crossing.
12. Stabilize any waste materials removed from the work site to prevent them from entering the watercourse. This could include covering spoil piles with biodegradable mats or tarps or planting them with preferably native grass or shrubs.
13. Vegetate any disturbed areas by planting and seeding preferably with native trees, shrubs or grasses and cover such areas with mulch to prevent erosion and to help seeds germinate. If there is insufficient time remaining in the growing season, the site should be stabilized (e.g., cover exposed areas with erosion control blankets to keep the soil in place and prevent erosion) and vegetated the following spring.
 - 13.1. Maintain effective sediment and erosion control measures until re-vegetation of disturbed areas is achieved.

Definition:

Ordinary high water mark – The usual or average level to which a body of water rises at its highest point and remains for sufficient time so as to change the characteristics of the land. In flowing waters (rivers, streams) this refers to the “active channel/bank-full level” which is often the 1:2 year flood flow return level. In inland lakes, wetlands or marine environments it refers to those parts of the water body bed and banks that are frequently flooded by water so as to leave a mark on the land and where the natural vegetation changes from predominately aquatic vegetation to terrestrial

vegetation (excepting water tolerant species). For reservoirs this refers to normal high operating levels (Full Supply Level).

For the Great Lakes this refers to the 80th percentile elevation above chart datum as described in DFO's *Fish Habitat and Determining the High Water Mark on Lakes*.

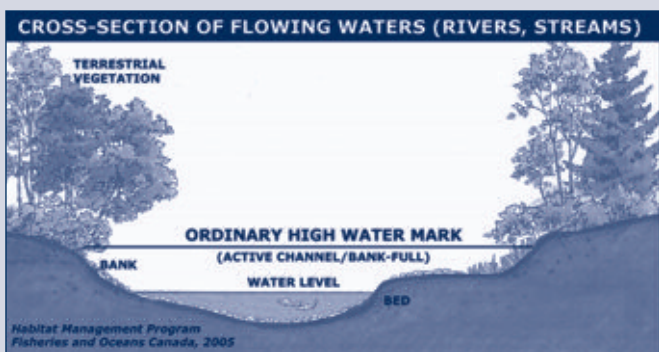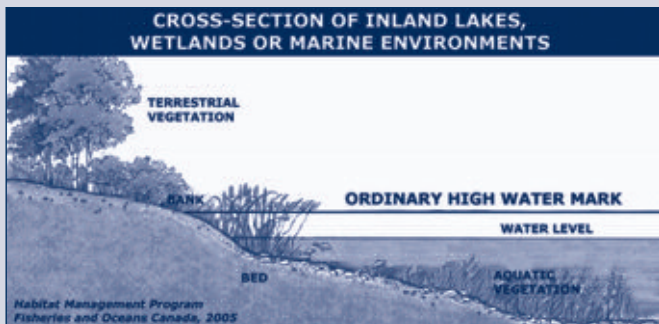

Eastern Ontario District

Peterborough

Fisheries and Oceans Canada
501 Towerhill Road, Unit 102
Peterborough, ON K9H 7S3
Telephone: (705) 750-0269
Fax: (705) 750-4016
Email: ReferralsPeterborough@DFO-MPO.GC.CA

Prescott

Fisheries and Oceans Canada
401 King Street West
Prescott, ON K0E 1T0
Telephone: (613) 925-2865
Fax: (613) 925-2245
Email: ReferralsPrescott@DFO-MPO.GC.CA

Northern Ontario District

Parry Sound

Fisheries and Oceans Canada
28 Waubeek Street
Parry Sound, ON P2A 1B9
Telephone: (705) 746-2196
Fax: (705) 746-4820
Email: ReferralsParrySound@DFO-MPO.GC.CA

Sudbury and Sault Ste. Marie

Fisheries and Oceans Canada
1500 Paris Street, Unit 11
Sudbury, ON P3E 3B8
Telephone: (705) 522-2816
Fax: (705) 522-6421
Email: ReferralsSudbury@DFO-MPO.GC.CA

Thunder Bay and Kenora

Fisheries and Oceans Canada
Thunder Bay Office
100 Main Street, Suite 425
Thunder Bay, ON P7B 6R9
Telephone: (807) 346-8118
Fax: (807) 346-8545
Email: ReferralsThunderBay@DFO-MPO.GC.CA

Aussi disponible en français

http://www.dfo-mpo.gc.ca/oceans-habitat/habitat/modernizing-moderniser/epmp-pmpe/index_f.asp

FISHERIES AND OCEANS CANADA OFFICES IN ONTARIO

Southern Ontario District

Burlington

Fisheries and Oceans Canada
3027 Harvester Road, Suite 304
P.O. Box 85060
Burlington, ON L7R 4K3
Telephone: (905) 639-0188
Fax: (905) 639-3549
Email: ReferralsBurlington@DFO-MPO.GC.CA

London

Fisheries and Oceans Canada
73 Meg Drive
London, ON N6E 2V2
Telephone: (519) 668-2722
Fax: (519) 668-1772
Email: ReferralsLondon@DFO-MPO.GC.CA